



LINDEX
CASEIN
Flat Wall Paint
Oil Bound
POWDER
or
PASTE

Tamms Silica Company
Chicago, Ill., U. S. A.

LINDEX CASEIN F

Paste or



LIGHT BUFF



AZURE BLUE



TAN



FRENCH GRAY



DEEP YELLOW




LAVENDER

Also Made

LAT WALL PAINT

Powder

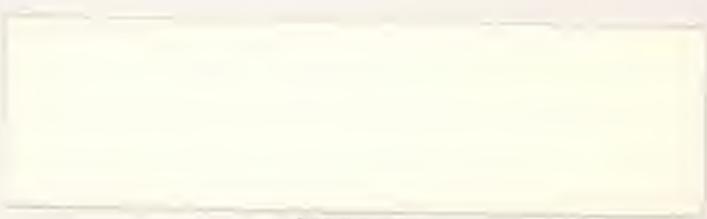

IVORY



ROSE PINK



RICH CREAM



LIGHT BLUE



CREAM



LIGHT GREEN

WHITE

LINDEX POWDER

Mixing Directions for Interior

Ten pounds of LINDEX Powder should be mixed with water, either warm or cold, to a heavy cream consistency. Stir thoroly to break up all lumps. Additional water should be added to bring the mixture to a brushing or spraying consistency. The finish obtained by using LINDEX, mixed with the water only, will be a washable finish, but a more washable finish can be obtained by adding one pint of boiled linseed oil to each ten pounds of LINDEX Powder. If the boiled linseed oil is to be used, prepare the LINDEX Powder in the proportions of ten pounds of powder to the necessary amount of water to bring the material to a creamy consistency. The mixture should be allowed to stand for about thirty minutes, and then one pint of boiled linseed oil added. When adding the linseed oil, stir it in thoroly until free from lumps. For best results, the mixed LINDEX should be put thru a paint strainer. A good heavy cream consistency is desirable for one-coat coverage.

AVOID MIXING TOO THIN.

Use clean metal container for mixing.

LINDEX PASTE

Mixing Directions for Interior

Gradually add water (about $\frac{1}{2}$ gal.) to each gallon of Lindex Paste. Use warm water in cold weather. Sufficient water should be added to obtain brushing or spraying consistency. Only mix enough material to use in one day. If more is mixed with water than will be used during the day, then the container should be covered with a damp cloth, and the material used the following day.

Use clean metal container for mixing.

TAMMS Finishes Are Used All Over the World



DELL & MILLER, INC.
1400 ST CHARLES AVE.
MA. 5949

Made in U. S. A.

LIN

Mixi

Ten pounds with water, either consistency. Sufficient water should be obtained by using LIN. A good heavy coat coverage.

AVOID MIX

Use clean me

L

Mixi

Gradually add of Lindex Paste. Sufficient water spraying consistency in one day. If used during the with a damp ing day.

Use clean me

TAMMS Fini

LIN

1

Made in U. S.

GENERAL PTC.

Digitized by ASSOCIATION FOR PRESERVATION TECHNOLOGY, www.apti.org for the
BUILDING TECHNOLOGY HERITAGE LIBRARY

<https://archive.org/details/buildingtechnologylibrary>

From the collection of

Tulane University: Southeastern Architectural Archive <http://seaa.tulane.edu>

DER

terior

should be mixed a heavy cream all lumps. Adding the mixture to the finish obtained water only, will shable finish can boiled linseed oil ller. If the boiled INDEX Powder powder to the he material to a ld be allowed to hen one pint of the linseed oil, For best results, a paint strainer. esirable for one-

TE

terior

) to each gallon in cold weather. obtain brushing or a material to use ater than will be should be covered used the follow-

Over the World

, INC.
AVE.

ORT WAYNE, IND.